

Robertshaw®


9700i

9701i

9715i

9720i

DELUXE
PROGRAMMABLE
THERMOSTATS

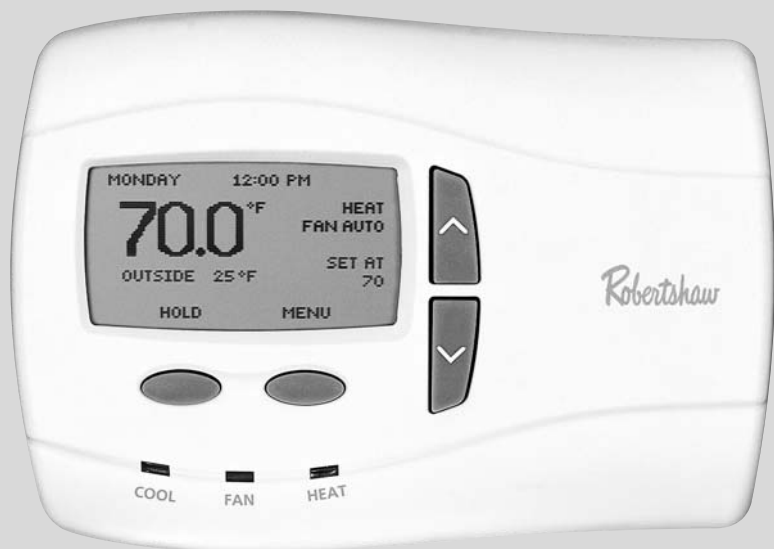

User's Manual

Menu Driven Display

Fully Programmable

24 VAC with Worry-Free
Memory Storage

English, Spanish or
French Display Option



110-1023E

Two Year Warranty

IMPORTANT SAFETY INFORMATION


WARNING:

- Always turn off power at the main power source by unscrewing fuse or switching circuit breaker to the off position before installing, removing, or cleaning this thermostat.
- Read all of the information in this manual before programming this thermostat.
- This is a 24V AC low-voltage thermostat. Do not install on voltages higher than 30V AC.
- All wiring must conform to local and national building and electrical codes and ordinances.
- Do not short (jumper) across terminals on the gas valve or at the system control to test installation. This will damage the thermostat and void the warranty.
- Do not connect ground to any terminal in this unit.
- This thermostat is equipped with automatic compressor protection to prevent potential damage due to short cycling or extended power outages. The short cycle protection provides a 5-minute delay between heating or cooling cycles to prevent the compressor from being damaged.
- Do not switch system to cool if the temperature is below 50°F (10°C). This can damage the cooling system and may cause personal injury.
- Use this thermostat only as described in this manual.


TABLE OF CONTENTS

How do I change the time of day and day of the week?	Page 4
How do I turn on the heating or cooling cycles?	Page 5
How do I cycle the fan?	Page 6
How does INTERMITTENT FAN work?	Page 6
How do I temporarily change the temperature?	Page 7
Can I set a temporary adjustment for longer than 3 hours?	Page 8
Can I set the thermostat to hold one temperature indefinitely?	Page 9
How do I return to the Program Mode after being in HOLD?	Page 9
How do I set the Vacation Mode?	Page 10
How do I program my thermostat?	Page 11
How do I copy one day's program to another day?	Page 13
What is an event?	Page 14
How do I know what program is right for me?	Page 14
What are the USER settings?	Page 15
Detailed Information on the USER SETTINGS (Or what do these USER SETTINGS do?)	Page 16
When would I need to change the USER settings?	Page 18
What are the INSTALLER settings?	Page 19
When would I need to change the INSTALLER settings?	Page 23
How does Energy Efficient Recovery™ (EER™) work?	Page 23
How does my remote indoor sensor work?	Page 23
When would I need a remote indoor sensor?	Page 23
How does my remote outdoor sensor work?	Page 23
Where should I install a remote outdoor sensor?	Page 24
Who should I call for additional help?	Page 24
What should I do if my power goes out?	Page 24
How do I reset the thermostat program to factory conditions?	Page 24
How do I know if the heating or cooling is on?	Page 24
My energy bills are too high. Is there anything I can do?	Page 25
When should I change the batteries?	Page 26
How do I change the batteries?	Page 26

How do I change the time of day and day of the week?

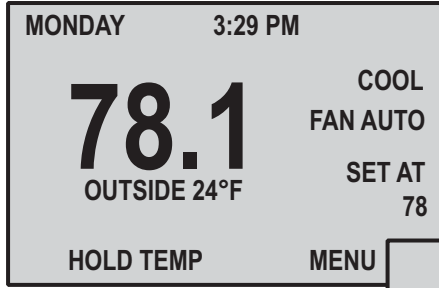


From the main screen press MENU.

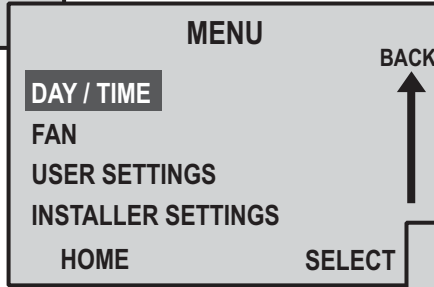


Use the UP or DOWN arrows to highlight DAY/TIME. Press SELECT.


Use the UP or DOWN arrow to highlight DAY, HOUR or MINUTES. Press SET.

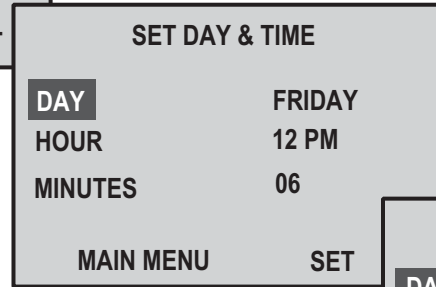


Use the UP or DOWN arrow to scroll through the days of the week, hours or minutes. Press SET to select desired value. Press MAIN MENU when complete.

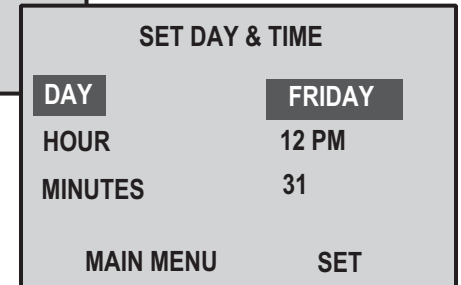


How do I turn on the heating or cooling cycles?

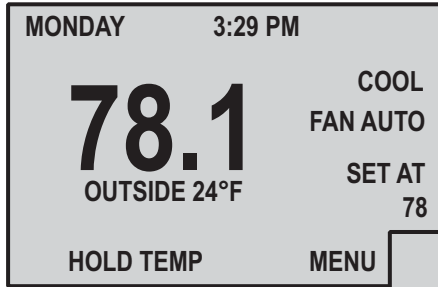

From the main screen press MENU.

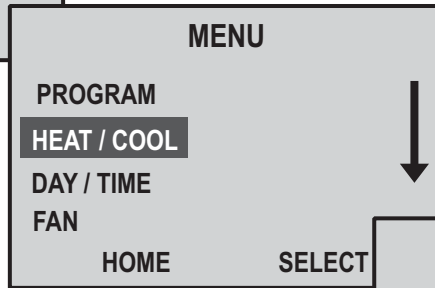


Use the UP or DOWN arrows to highlight HEAT/COOL.
Press SELECT.

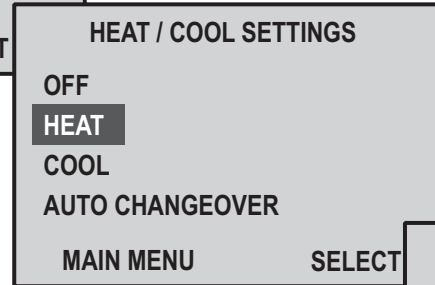


Use the UP or DOWN arrows to highlight HEAT, COOL or AUTO CHANGEOVER. Press SELECT. The SELECT button will turn on (or off) the desired cycle. You do not have to turn off HEAT to turn on COOL. When HEAT or COOL or AUTO is turned on, all others are automatically shut off. After pressing the SELECT button, the main screen will automatically appear.


NOTE: EMERGENCY HEAT is used only on the 9720i model.
AUTO CHANGEOVER appears only if Auto Changeover is turned on in the Installer Settings.

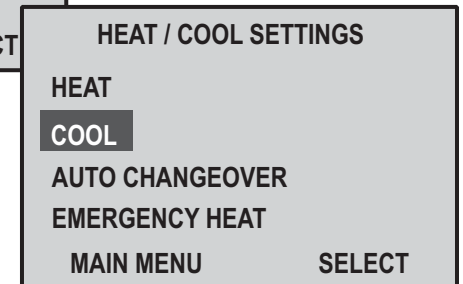


How do I cycle the fan?

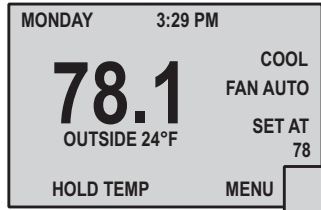


From the main screen press MENU.

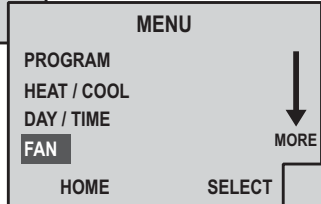

Use the UP or DOWN buttons until FAN is highlighted. Press SELECT.

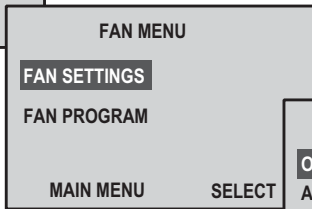


Use the UP or DOWN buttons to highlight FAN SETTINGS. Press SELECT.

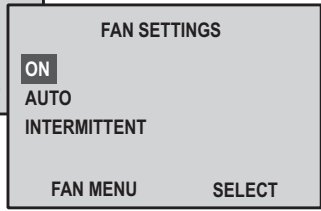

Three choices are available:
 ON will turn the fan on continuously.
 AUTO will turn the fan on only when there is a call for heating or cooling.
 INTERMITTENT will turn the fan on for a set period of time for a given interval. Highlight the choice you desire and press SELECT.

How does INTERMITTENT FAN work?

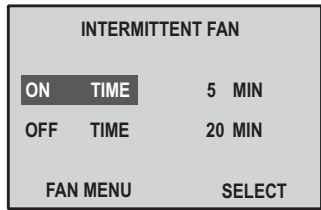


INTERMITTENT will turn the fan on for a set period of time for a given interval.


The thermostat will cycle the fan on for the set ON cycle. The fan will remain off for the set OFF cycle.

If the HVAC system runs for a longer period than the ON cycle, the OFF cycle will start counting over again when the system shuts off.


How do I temporarily change the temperature?

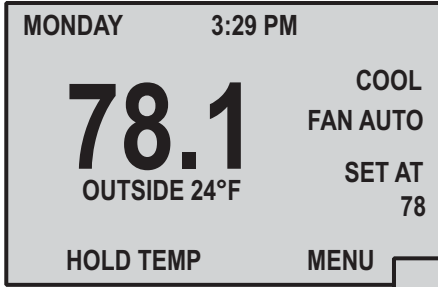

From the main screen, press the UP or DOWN button. The screen will change to the following.

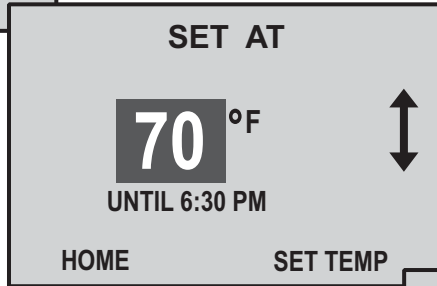


Use the UP or DOWN button to adjust to the desired temperature. This is a temporary 3-hour hold or until the next programmed event, whichever is shorter. For a longer duration see page 9.

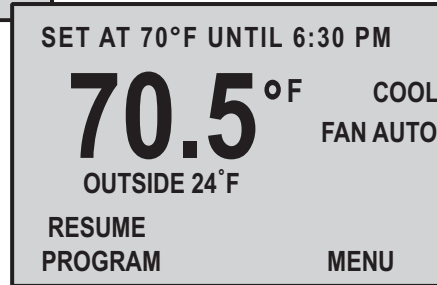


After pressing the SET TEMP button or after 5 seconds the screen will indicate the new setpoint and its duration. To return to the normal operating program mode, press RESUME PROGRAM.


Can I set a temporary adjustment for longer than 3 hours?

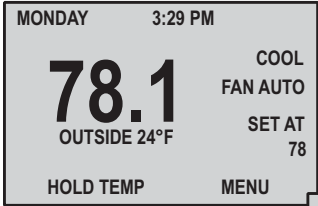

Yes you can! Press the HOLD TEMP button. The following screen appears.

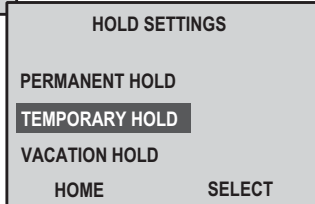


Press the DOWN button to highlight TEMPORARY HOLD. Press SELECT.

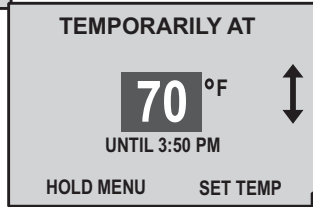


The temperature should be highlighted. Press the UP or DOWN button to adjust the temperature. Press SET TEMP.


The time should be highlighted. Press the UP or DOWN button to adjust the time. Press SET TIME.

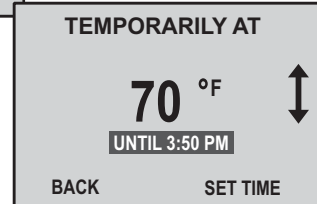


The main screen will now indicate a TEMPORARY HOLD until the desired time. Press RESUME PROGRAM to return to the program operating mode.

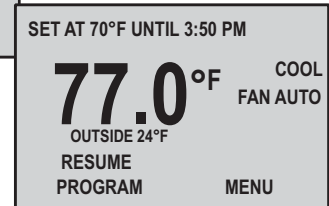


Can I set the thermostat to hold one temperature indefinitely?

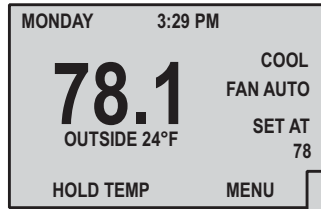


You can do that too! From the main screen press the HOLD TEMP button. The following screen appears.

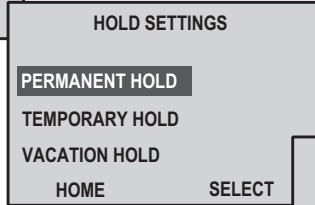

The PERMANENT HOLD feature should be highlighted. If it is not, use the UP or DOWN arrow to highlight it. Press SELECT.

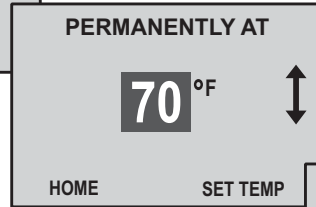


Use the UP or DOWN arrow to set the temperature to the desired level. Press SET TEMP.

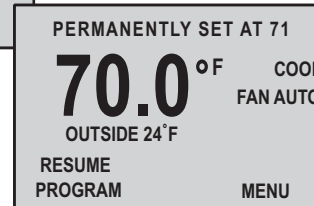


The main screen will now indicate a PERMANENT HOLD. Press RESUME PROGRAM to return to the program operating mode.

How do I return to the Program Mode after being in HOLD?

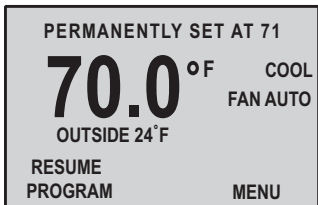


Simply press the RESUME PROGRAM button. This works from all HOLD screens.


How do I set the Vacation Mode?

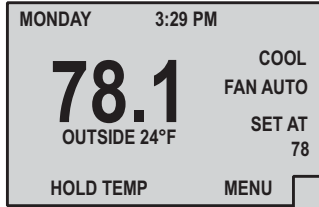

Take a trip and don't worry about the temperature! From the main screen press the HOLD TEMP button. The following screen appears.

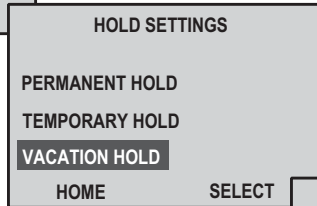


Use the UP or DOWN arrow to highlight the VACATION HOLD feature. Press SELECT.

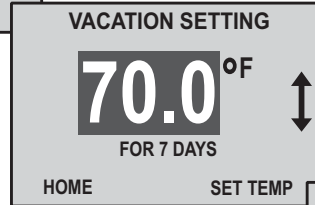


The temperature should be highlighted. Use the UP or DOWN arrow to change to the desired temperature. Press SET TEMP.


The number of days should be blinking. Use the UP or DOWN arrow to set the length of your vacation. Press SET DAY.

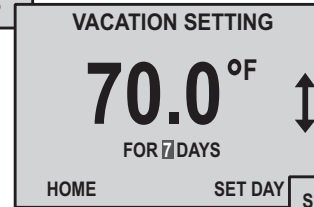


The main screen will now indicate the VACATION settings. Press RESUME PROGRAM to cancel and return to the program operating mode.

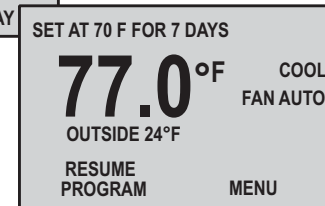


How do I program my thermostat?

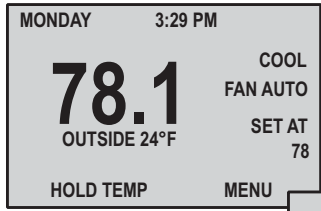


From the main screen press the MENU button.

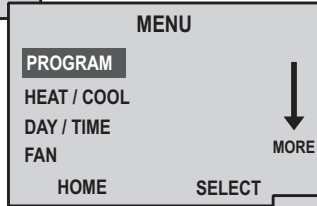

Use the UP or DOWN button to highlight PROGRAM. Press SELECT.

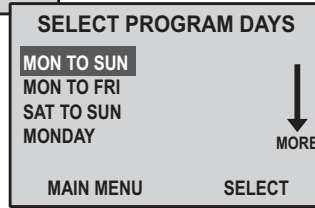

You can select a variety of programming. Make your selection and press SELECT. MON-SUN allows every day to be set the same. MON-FRI allows for weekday programming while SAT-SUN will adjust weekends differently. You also can select each day of the week individually. NOTE: Even if you select MON-SUN, you still can go back and change individual days to suit your lifestyle.

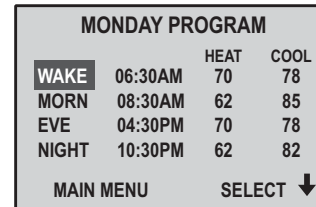

Use the UP or DOWN button to select the event to program. You can choose 2, 4, or 6 events per day. See USER SETTINGS for EVENTS PER DAY selection. After selecting the event to program, press SELECT.

Please go to the next page for a continued discussion on "How to program your thermostat."

How do I program my thermostat? (continued)

MONDAY PROGRAM			
		HEAT	COOL
WAKE	06:00AM	70	78
MORN	08:30AM	62	85
EVE	04:30PM	70	78
NIGHT	10:30PM	62	82
MAIN MENU		SET TIME ↓	

The time for the first event should be highlighted. Use the UP or DOWN key to change the time. Press SET TIME.

MONDAY PROGRAM			
		HEAT	COOL
WAKE	06:30AM	70	78
MORN	08:30AM	62	85
EVE	04:30PM	70	78
NIGHT	10:30PM	62	82
MAIN MENU		SET HEAT ↓	

The heating setpoint for the first event will be highlighted. Use the UP or DOWN key to change the desired temperature. Press SET HEAT.

MONDAY PROGRAM			
		HEAT	COOL
WAKE	06:30AM	70	78
MORN	08:30AM	62	85
EVE	04:30PM	70	78
NIGHT	10:30PM	62	82
MAIN MENU		SET COOL ↓	

The cooling setpoint for the first event will be highlighted. Use the UP or DOWN key to change the desired temperature. Press SET COOL.

The second event will now be highlighted. Use the UP or DOWN key to change events if desired. When the desired event is highlighted, press SELECT. Continue programming until all events are programmed.

MONDAY PROGRAM			
		HEAT	COOL
WAKE	06:30AM	70	78
MORN	08:30AM	62	85
EVE	04:30PM	70	78
NIGHT	10:30PM	62	82
MAIN MENU		SELECT ↓	

How do I copy one day's program to another day?

MONDAY PROGRAM				↑
		HEAT	COOL	
MORN	08:30AM	62	85	
EVE	04:30PM	70	78	
NIGHT	10:30PM	62	82	
COPY				
MAIN MENU		SELECT		

In the program screen, press the DOWN button until COPY is highlighted.

COPY MONDAY TO		
TUESDAY	YES	↓
WEDNESDAY		
THURSDAY		
FRIDAY	YES	
FINISHED	YES / NO	

Use the UP or DOWN button to highlight the day to copy to. Press YES / NO. A YES will appear next to the day. Do this for each day to which that program is to be copied. Press FINISHED when complete.

After pressing FINISHED, you can choose to program other days or exit. YES will take you back to the Select Program Days screen. NO will exit you to the main screen.

CONTINUE PROGRAMMING?	
NO	YES

What is an event?

An event is a programming period. This could be the period in the morning when you are preparing for work or school. It could be the period when no one is at home. It could be the period when the household is asleep at night.

The time for an event is selected based on when you want the event to occur. For example, if you wake up at 6:30 AM, set the first event for 6:30 AM. The thermostat will automatically make sure that your home is at the desired temperature selected for that event by the time you wake.

This thermostat can be set for 2, 4, or 6 events.

Two events should be selected if someone is home all day thereby requiring a constant temperature during the day and a different temperature at night.

Four events are the most common for working households. Event 1 (WAKE) is the morning period. Event 2 (DAY) is when everybody has left for school or work. Event 3 (EVE) is the return period, coming home from school or work. Event 4 (NIGHT) is the night period when everybody is asleep.


Six events can be used especially when there is activity during the day. Event 1 (WAKE) is the morning period. Event 2 (MORN) is when everybody has left for school or work. Event 3 (NOON) is the lunch period, when the kids may be home for a break. Event 4 (DAY) is the afternoon period when the house is empty. Event 5 (EVE) is the return period, coming home from school or work. Event 6 (NIGHT) is the night period when everybody is asleep.

How do I know what program is right for me?


The thermostat is factory set with the US EPA ENERGYSTAR® recommended times and temperatures for optimal energy savings. You can change these to suit your lifestyle.

The best rule is to examine your schedule and set the times and temperatures that best fit. This thermostat is so versatile, you can easily change temperatures or programs at a whim.

What are the USER settings?

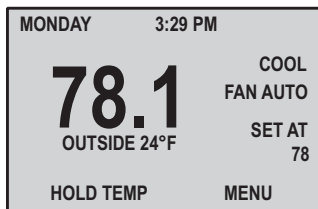




The USER SETTINGS can change the way information is displayed on the thermostat and help to optimize comfort. It's one way to truly personalize your new thermostat.

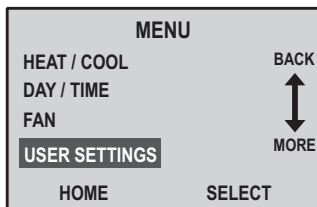

To get to the USER SETTINGS, press the MENU button from the main screen.


Use the DOWN button to scroll below the screen. Press SELECT.

Choose the setting you would like to change. When the SETTING is highlighted, press SELECT. There can be as many as 12 USER SETTINGS in all as listed below. For detailed information on each user setting, please go to the next page.

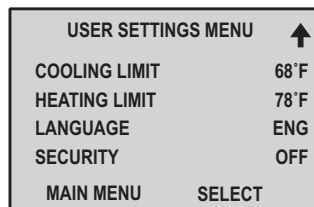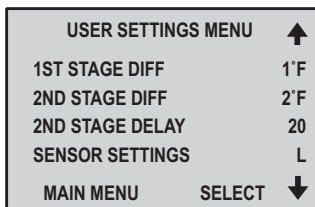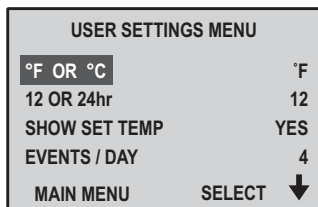

Detailed Information on the USER SETTINGS (Or what do these USER SETTINGS do?)

To select a USER SETTING, use the UP or DOWN button to highlight the desired setting. Press SELECT.

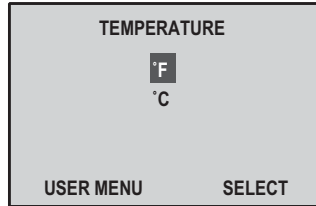


TEMPERATURE

'F
'C

USER MENU SELECT

TEMPERATURE: Fahrenheit or Celsius
Temperature will be displayed in F or C.

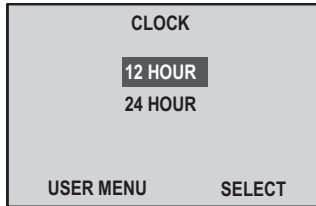


CLOCK

12 HOUR
24 HOUR

USER MENU SELECT

CLOCK SETTINGS
Displays time in standard 12-hour format or military format.

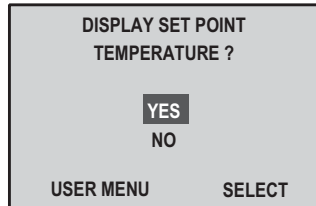


DISPLAY SET POINT
TEMPERATURE ?

YES
NO

USER MENU SELECT

SETPOINT TEMPERATURE
Each event has a setpoint temperature. Choose whether to display this value or not.

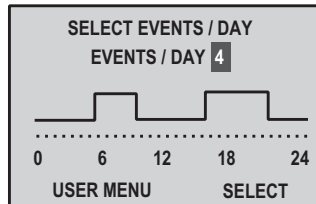

SELECT EVENTS / DAY

EVENTS / DAY 4

0 6 12 18 24

USER MENU SELECT

NUMBER OF EVENTS PER DAY
Select events per day. Choose from 2, 4, or 6 events per day.

More Detailed Information on the USER SETTINGS

DIFFERENTIAL SETTING	
1ST DIFF	1°F
2ND DIFF	2°F
2ND DELAY	20 MIN
USER MENU	SELECT

DIFFERENTIAL SETTINGS

The temperature differential is your comfort level. A lower differential means your system may cycle with greater frequency but will control closer to the setpoint temperature. The second stage delay is a timed delay to indicate how much time should pass before the second stage is turned on. This is an energy saving feature. To use less energy, set this higher. For greater comfort, set it lower.

SENSOR SETTINGS	
USE LOCAL SENSOR	
AVG. LOCAL / REMOTE	
USE REMOTE SENSOR	
USER MENU	SELECT

SENSOR SETTINGS

This screen will appear when a remote indoor sensor (9020i) is connected to the thermostat. USE LOCAL SENSOR will disable the remote sensor and only sense from the thermostat. AVG. LOCAL/REMOTE will take a temperature reading from both the thermostat and the remote sensor and average the two for even temperature control. USE REMOTE SENSOR will disable the sensor in the thermostat and only control from the remote location.


SET COOLING LIMIT	
LOWEST COOLING SETTING ALLOWED	
45 °F	
USER MENU	SELECT

SET HEATING LIMIT	
HIGHEST HEATING SETTING ALLOWED	
90 °F	
USER MENU	SELECT

HEATING and COOLING LIMITS


To prevent individuals (probably your kids) from adjusting the thermostat too hot or too cold, you can limit the maximum setting for the heating and cooling modes. This will help you save on energy costs.

More Detailed Information on the USER SETTINGS

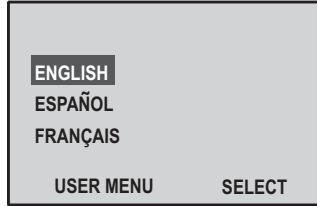


LANGUAGE SETTING

This screen allows you to choose the displayed language; English, French, or Spanish.

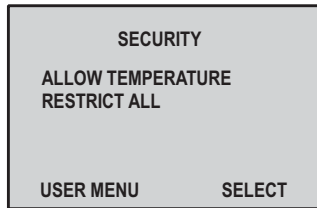

SECURITY SETTINGS

In order to prevent tampering with the program and your desired settings, two levels of security are available. The first will allow only temporary changes to the temperature. It protects all other programmed setpoints. The second will restrict changes to EVERYTHING, including temporary changes to the temperature.

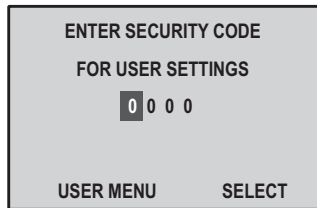

SECURITY CODE

In this screen you enter a four-digit code. Use the UP or DOWN button to change the first value, press SELECT. The second digit will be highlighted. Repeat for all four values. And don't forget your code. If you do, you will have to reset the entire thermostat and that will erase all the schedules you've programmed into the unit.

When would I need to change the USER settings?

About the only features you may need to change are the FILTER INTERVAL (in case you get a new type of high efficiency filter), the temperature differentials (if you desire additional comfort), and the security settings. All the other settings probably will not need to be changed.

What are the INSTALLER settings?

The INSTALLER SETTINGS are set up during the initial installation. They tell the thermostat how to function with your heating or cooling equipment. The following is a brief overview and discussion of these settings.

INSTALLER SETTINGS	
SYSTEM SETUP	GAS
RESIDUAL COOL	60
AUTO CHANGEOVER	OFF
EER	ON
HOME	SELECT ↓

INSTALLER SETTINGS ↑	
DEADBAND	3°F
SECURITY	OFF
CONTACT INFO	
SERVICE INT	
HOME	SELECT ↓

INSTALLER SETTINGS ↑	
CONTACT INFO	
SERVICE INT	
REMINDER	RUN
TEMP OFFSET	0.0°F
MAIN MENU	SELECT

SYSTEM SETUP	
FURNACE	
HEAT PUMP	
INSTALL MENU	SELECT

SYSTEM SETUP

Choose the system component which the thermostat will control.
This screen appears only on models 9700i and 9701i.

1ST STAGE HEATING	
GAS / OIL	
ELECTRIC	
INSTALL MENU	SELECT

1st STAGE HEATING

The 9701i and the 9715i can have a gas/oil or electric first stage heating.
Choose the energy source for 1st stage heating.

INSTALLER settings (continued)

AUXILIARY HEAT

STANDARD - COMP. =ON
ADD ON - COMP. =OFF

INSTALL MENU SELECT

AUXILIARY HEAT

The 9720i can be set to use your 2H/2C heat pump internal auxiliary heating or to use an external add-on source. The add-on feature will be used most often when a single stage heat pump uses a gas or electric furnace as its second stage of heating.

RESIDUAL COOL

SECONDS DELAY

60

INSTALL MENU SELECT

RESIDUAL COOL

In order to get greater efficiency from the cooling system, the fan can be programmed to run for 0 (OFF), 30, 60, 90, or 120 seconds after the air conditioner has shut off.

BALANCE POINTS

LOW BALANCE 45°F
HIGH BALANCE 95°F

INSTALL MENU SELECT

BALANCE POINTS

This screen will appear only when the optional outdoor sensor (9025i) is connected to the thermostat. When this sensor is used with the 9720i, you can set the lower and upper temperatures to disable or enable 2nd stage heat.

AUTO CHANGEOVER

DISABLE
ENABLE

INSTALL MENU SELECT

AUTO CHANGEOVER

When turned on, the thermostat will switch automatically between heating and cooling to maintain the optimal temperature in your home.

INSTALLER settings (continued)

ENERGY EFFICIENT
RECOVERY

DISABLE
ENABLE

USER MENU SELECT

ENERGY EFFICIENT RECOVERY

When turned on, the thermostat will look ahead two hours to determine when to turn on the heating/cooling system in order to reach the desired temperature at the desired time.

DEADBAND SETPOINT

3°F

↑ ↓

USER MENU SELECT

DEADBAND SETPOINT

Deadband is used with the AUTO CHANGEOVER feature. The deadband is the temperature difference from the setpoint temperature during which the heating or cooling will not be turned on. This is adjustable from 2-8°F (1.0-4°C).

ENTER SECURITY CODE
FOR INSTALLER
SETTINGS

0 0 0 0

USER MENU SELECT

SECURITY CODE

Enter a code to prevent changes to the INSTALLER settings.

INSTALLER settings (continued)

CONTACT INFORMATION	
AIR EXPERTS	
1-555-555-1212	
BACK	EDIT

CONTACT INFORMATION

This allows the servicing HVAC contractor to put their name and phone number into the thermostat to remind you when service may be required.

SERVICE MONITOR MENU	
SYSTEM MONITOR	980
FILTER MONITOR	980
INSTALL MENU	SELECT

SERVICE MONITOR MENU

Two menus are available, the System Monitor and the Filter Monitor. Both can be set based on the HVAC system run time or calendar based. See Reminder Interval.

Both the System Monitor and Filter Monitor can be set from OFF to 360 Days in 30 day increments or OFF to 980 in 20 hour increments.

REMINDER PERIOD	
RUN TIME	
CALENDAR TIME	
INSTALL MENU	SELECT

REMINDER INTERVAL

The Reminder Interval can be set for either HVAC system run time or based on the calendar.

If Run Time is chosen, the service reminder will be set in hours. After the HVAC system has been operating for the selected number of hours, a Service Reminder will be displayed informing you that service is suggested for your system.

If Calendar Time is chosen, the service reminders will be set in days. After the selected number of days has passed, a Service Reminder will be displayed informing you that service is suggested for your system.

When would I need to change the INSTALLER settings?

NEVER! The INSTALLER SETTINGS are selected based on the type of equipment you have in your home. This feature should be set only by a certified HVAC technician. Changing these settings could result in higher energy costs and may even damage your equipment. There is a security lock on this feature to prevent tampering. USE IT!

How does Energy Efficient Recovery™ (EER™) work?

Energy Efficient Recovery™ is an energy saving feature. During a set back period (or set up in cooling), it allows the thermostat to look ahead two hours to determine when to turn on the heating (cooling) system. During this period, the second stage is locked out to allow the first (and most efficient stage) to bring your home to the desired temperature.

How does my remote indoor sensor work?

The remote indoor sensor (part # 9020i) can be used to improve the comfort of your home. When used in conjunction with the local sensor on the thermostat, the two sensors average the sensed temperature and control to that average temperature.

You also can use the remote sensor in a stand-alone situation when you want to control the temperature in a remote room but have the thermostat in a secure location.

When would I need a remote indoor sensor?

Large rooms are ideal for remote sensors. Installing a remote sensor across from the thermostat will provide constant comfort throughout the living space.

How does my remote outdoor sensor work?

The remote outdoor sensor (part # 9025i) can be used to aid in the comfort of your home or simply as a sensing device to inquire about outdoor conditions. In most applications, the thermostat will have a display of the temperature sensed by the remote outdoor sensor. With your heat pump system, the remote outdoor sensor can help determine when to turn on the second stage of heating for optimal comfort.

Where should I install a remote outdoor sensor?

The remote outdoor sensor should be installed on the northern wall of your home, away from direct sunlight or other heat sources that may affect its sensitivity.

Who should I call for additional help?

For additional troubleshooting information, visit our web site at www.about-i-series.com. To talk with a service representative, give us a call at 800-445-8299.

What should I do if my power goes out?

Make sure your family is safe and don't worry about the thermostat. Your thermostat automatically retains the time of day for approximately two hours in the event of a power outage. All other programmed parameters are stored permanently in memory. So, if your power is out for more than two hours, simply reset the clock. See page 4.

How do I reset the thermostat program to factory conditions?

To reset the thermostat to factory conditions, press the UP button and the LEFT button at the same time. Hold for 3 seconds. The time of day will display 12:00 indicating a reset has occurred.

NOTE: This will erase all programming and return the thermostat to the factory conditions including the installer settings. Use this only as a last resort.

How do I know if the heating or cooling is on?

The display of the thermostat will indicate the operating mode, HEAT or COOL. When the temperature in your home decreases or increases, the HEATING or COOLING cycle will come on based on the displayed mode. When the HVAC system is ON, the LEDs along the bottom crease will turn on.

My energy bills are too high. Is there anything I can do?

While we can't do anything about the high cost of energy, we can try to use less energy and thereby lower our heating and cooling costs.

Generally, the best way to do this is to use the EPA ENERGYSTAR® recommended setpoints for heating and cooling.


ENERGYSTAR® Setpoints		
	Winter	Summer
	(Heating)	(Cooling)
Morning	70°F (21°C)	78°F (25°C)
Day	62°F (17°C)	85°F (29°C)
Evening	70°F (21°C)	78°F (25°C)
Night	62°F (17°C)	82°F (28°C)

Another way to contain costs is to cycle the heat pump or air conditioner with moderation. The thermostat controls the cycle rate based on temperature differentials. By maintaining a reasonable differential setpoint, 1°F for 1st stage and 2°F for 2nd stage, your furnace will cycle with moderation.


Finally, using the remote outdoor sensor coupled with the balance point feature (see INSTALLER SETTINGS, page 20) will allow your furnace to cycle to the most efficient stage for your heating or cooling needs.

When should I change the batteries?


Only the model 9700i operates with batteries. The 9701i, 9715i and 9720i operate from power provided by your HVAC system.

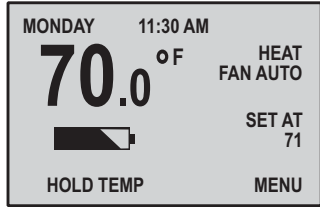

Generally the batteries will last 18-24 months. The thermostat will tell you when to change the batteries. A battery symbol will appear just below the temperature display. The thermostat will continue to operate for a short period of time with this notification on the display. The low battery warning supercedes all other notifications including outdoor temperature and the filter monitor.

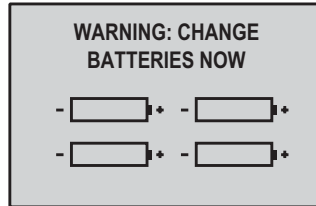

If the WARNING screen is displayed, the thermostat will shut down all operations, including heating and cooling. It's important to change the batteries promptly if this screen appears.

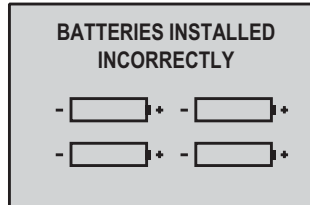

How do I change the batteries?

Simply slide the battery door to the right. Remove the two right most batteries first. Then remove the two left batteries. The screen to the left will appear. This screen will help you orient the new batteries. Replace with four fresh AA alkaline batteries. **REPLACEMENT TIP:** It's easier to replace the two left most batteries first, then the right ones.

TWO YEAR LIMITED WARRANTY

The manufacturer warrants to the original contractor installer or to the original consumer user, each new Robertshaw thermostat to be free from defects in materials and workmanship under normal use and service for a period of two (2) years from the date of purchase.

This warranty does not cover batteries (if so equipped), damage caused by batteries, damage resulting from improper installation, alteration, misuse or abuse of the thermostat occurring after the date of purchase.

The manufacturer agrees to repair or replace at its option any thermostat under warranty provided it is returned within the warranty period, postage prepaid, with proof of the date of purchase. Cost of thermostat removal or reinstallation is not the responsibility of the manufacturer.

Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. This warranty and our liability does not apply to merchandise that has been damaged caused by misuse, neglect, mishandling, alterations, improper installation, or use in a way other than in accordance with the recommendations and instructions of the manufacturer. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Instructions for return:

Pack the thermostat carefully in a well-padded carton. Be sure to include a note describing, in detail, what is wrong with the product. Return, postage prepaid, to: **Climate Controls Americas** 515 South Promenade Ave., Corona, CA 91719, Attn: Warranty Department

invensys[®]

Climate Controls Americas
515 South Promenade Avenue
Corona, CA 92879-1736
United States of America
Made in Mexico
Patents Pending
www.about-i-series.com

110-1023E